


2 CHANNEL RGB REMOTE CONTROL FUNCTIONS

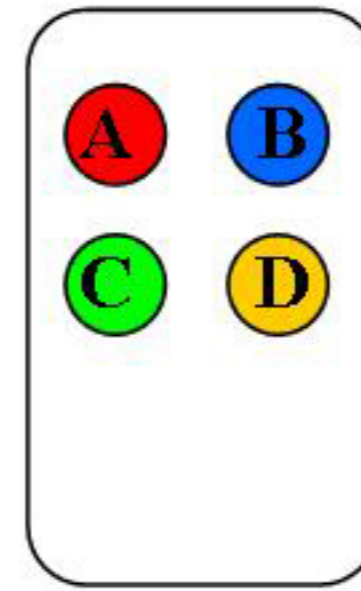

- A1** RED
- A2** BLUE
- A3** PINK
- A4** GREEN
- A5** YELLOW
- A6** AQUA
- A7** WHITE
- A8** BOTH CHANNELS ON ONE RED/
BLUE
- A9** PINK/GREEN
- A10** YELLOW/AQUA
- A11** RED/WHITE
- A12** WHITE/GREEN
- A13** GREEN/BLUE
- A14** PINK AQUA
- A15** FLASH THROUGH 7 COLORS
- A16** FADE THROUGH 7 COLORS

- B1** CHANNEL 1 STROBE
- B2** CHANNEL 2 STROBE
- B3** BOTH CHANNELS STROBES
- B4** FLASHES BETWEEN BOTH CHANNELS
- B5** STROBES CHANNEL 1 3 TIMES THEN
CHANNEL 2 3 TIMES
- B6** CHANNEL 1 ON THEN CHANNEL 2 ON THEN
1 OFF THEN 1 ON 2 OFF
- B7** CHANNEL 1 STROBE CHANNEL 2 ON AT THE
SAME TIME
- B8** THE OPPOSITE FUNCTION AS 7

WHEN IN MODE A1-A14 YOU CAN PUSH **B** FOR STROBE FUNCTIONS AND **C** FOR FADE FUNCTIONS

WHEN IN MODE A15-A16 BY PUSHING **B** BUTTON SPEEDS UP FUNCTION

WHEN PUSHING **C** BUTTON SLOWS DOWN FUNCTION

- C1** CHANNEL 1 FADE ON/OFF
- C2** CHANNEL 2 FADE ON/OFF
- C3** BOTH CHANNELS FADE ON/OFF
- C4** FADE CHANNEL 1 ON/OFF THEN CHANNEL 2
ON/OFF
- C5** CHANNEL ONE FADE ON/OFF CHANNEL 2 ON
- C6** OPPOSITE FUNCTION AS C5

D1 ON/OFF OF POWER

