


## 2014+ Harley Davidson Street Glide / Electra Glide Fairing Speaker Pod Kit Installation Instructions

## **Preparation**

First, remove your fairing and speaker pods. Then, you must prep the surface of your speaker pods. Thoroughly clean and degrease the outside and inside of both pods to ensure the adhesive material sticks correctly.

Last, use a sharp razor to cut the kit pieces out of the main sheet.

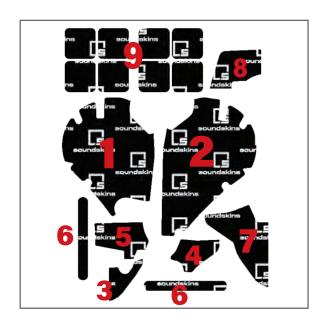

## Installation




1. Locate the two largest panels and use the smaller of the two (piece 1) for the right side pod (the pod with a hole through the middle for the cigarette lighter harness). Take your time lining up the panel on the pod before placing it down permanently. The easiest way to align this piece is by lining up the notches along the piece with the screw holes along the side of the pod.



2. Next, turn the pod around and we will apply panels 3 and 4 around the cigarette lighter harness.




3. Now, apply to the pieces that go inside the speaker pod, piece 5 and piece 6. Piece 5 goes inside the pod on the largest flat surface. Piece 6 will go inside the longest rib inside the pod.

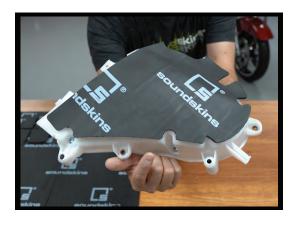

4. Then, move on to the left side pod. Piece 2 will go on the largest side of the pod. Line up the piece along the pod the same way you did on the right side, by aligning the screw holes that run along the side of the pod with the notches on the piece.



5. Apply panel 7 on the side of the speaker hole.

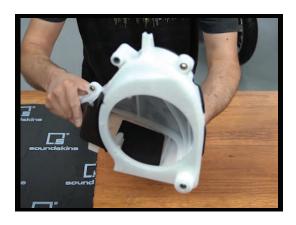

6. Place piece 8 on the biggest flat surface on the inside of the pod.



7. The final step for the completing the pods is to put 4 pieces of panel 9 on the inside of each pod. These pieces don't have a specific place in the pod, they can be installed anywhere they will fit.

## You're ready to hit the road!



Soundskins USA 13452 Alondra Blvd, Cerritos, Ca 90703

Phone: 562.689.5151

Email: usa@soundskinsglobal.com

www.SoundSkinsGlobal.com