



soundskins®


2015+ Harley Davidson Road Glide Fairing Speaker Pod Kit Installation Instructions

Preparation

First, remove your fairing and speaker pods. Then, you must prep the surface of your speaker pods. Thoroughly clean and degrease the outside and inside of both pods to ensure the adhesive material sticks correctly.

Last, use a sharp razor to cut the kit pieces out of the main sheet.

Installation

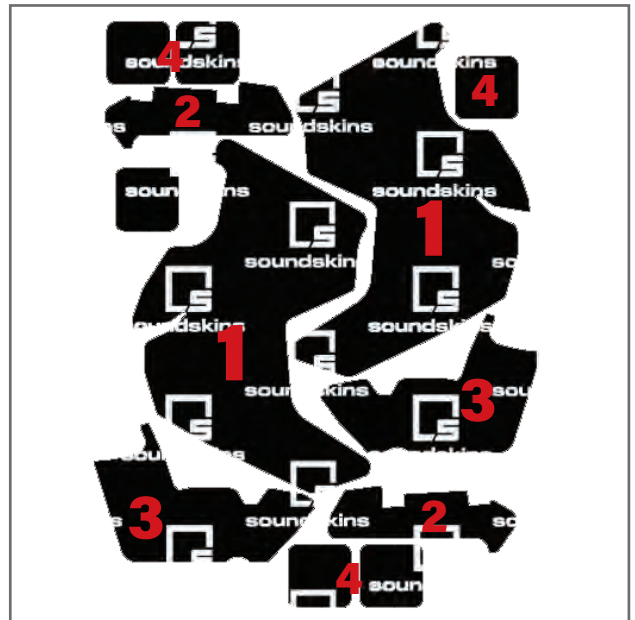

1. Start with piece 1. It will wrap around the fairing pod. The slit on this piece should come together when applied on the fairing speaker pods correctly. Mock up the piece to ensure proper placement before installing



2. Piece 2 will go on the top side of the pod, you will find a flat section that fits the shape of the piece. You can tell which way the piece lays because of the square notches on the outer side of the pod.



3. Piece 3 will go on the bottom of the side of the pod. To find where to start, line up the small protrusion from this piece along the area where it fits on the speaker pod. Mock the piece up before installing.



4. The ribs on the inside of the pods break up sound waves so they don't cancel each other out, but you still want to get rid of reflective surfaces at higher frequencies. So, pieces 4 can be placed inside different areas of the pod to absorb some of the higher frequencies of the sound.

You're ready to hit the road!



Soundskins USA
13452 Alondra Blvd, Cerritos, Ca 90703
Phone: 562.689.5151
Email: usa@soundskinsglobal.com
www.SoundSkinsGlobal.com