


## 2024+ Harley Davidson Road Glide Fairing Speaker Pod Kit Installation Instructions

### Preparation

First, remove your fairing and speaker pods. Then, thoroughly clean and degrease the outside and inside of both pods to ensure the adhesive material sticks correctly.

Last, use a sharp razor to cut the kit pieces out of the main sheet.

Take your time aligning each panel before placing it permanently. Align the notches with the screw holes along the pod side.

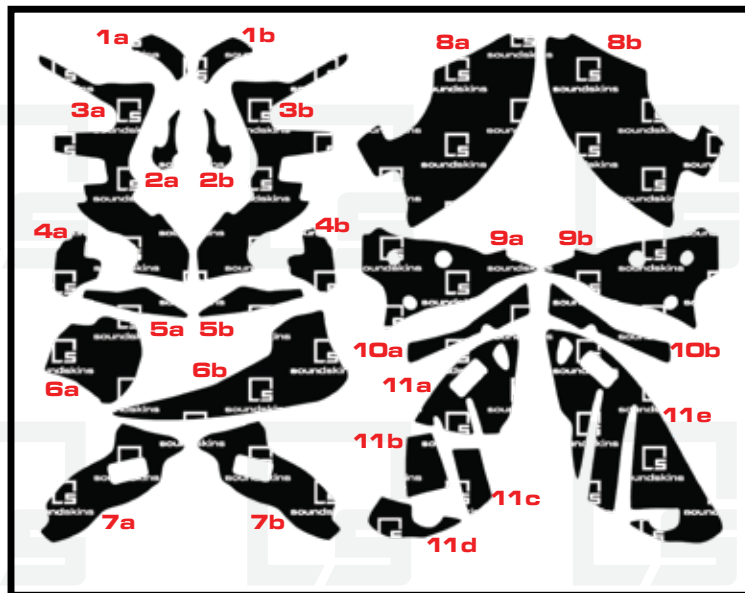


### Installation




#### 1. Mounting Hole:

- Locate pieces 1a and 1b.
- Place them around speaker hole.

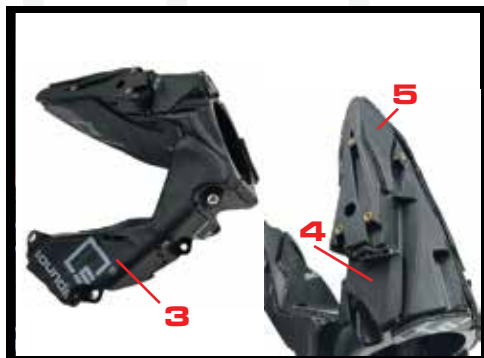

#### 2. Inner Panels:

- Turn the pod around to apply panels 3a-3b.
- Place 3a on the large surface on inside of bottom arm.
- Place 4 & 5 on the same side in the area above.

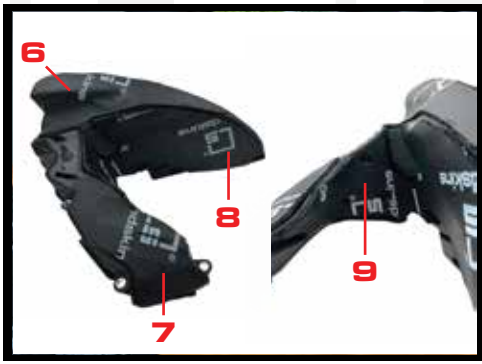

### 3. Outer & Under Side Panels:

- Flip pod around and apply 6a and 6b on top side area.
- Place 7a and 7b on outside area of bottom arm.
- Apply 8a and 8b in back area that faces the ground.
- Place 9a and 9b under panel 8.



### 4. Top of Clutch Side Pod:

- Apply pieces 11a-11e to top side of pod leaving room for the antenna.
- Place 10b in between 11d and the front of the pod.



### 5. Top of Brake Side Pod:

- Rotate the pod to make the top side visible.
- Place 10b in between 11e and front of pod.
- Apply 11e on the large area on top of the pod.