


## 2024+ Harley Davidson Street Glide Fairing Speaker Pod Kit Installation Instructions

### Preparation

First, remove your fairing and speaker pods. Then, thoroughly clean and degrease the outside and inside of both pods to ensure the adhesive material sticks correctly.

Last, use a sharp razor to cut the kit pieces out of the main sheet.

Take your time aligning each panel before placing it permanently. Align the notches with the screw holes along the pod side.

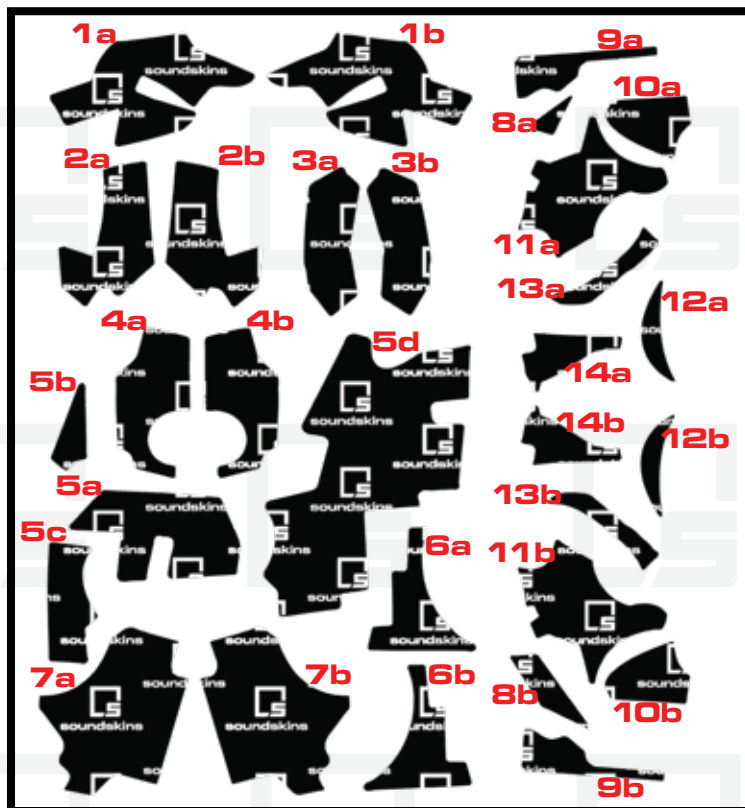

### Installation




#### 1. Lower Back Corner:

- Locate pieces 1a and 1b.
- Place them on the lower back corner of the pod.
- Place 2a and 2b above pieces 1a/1b, under the shelf.
- Apply 3a and 3b on the same side, outside of pieces 1 and 2.
- Finally, place 4a and 4b between pieces 1 and 2.



#### 2. Top Surface:

- Turn the pod around to apply panels 5a-5d.
- Place panels 5a-5d on the large surface at the top of pod.
  - Note: the clutch side is split into 3 pieces 5a-5c to fit around the radio antenna.

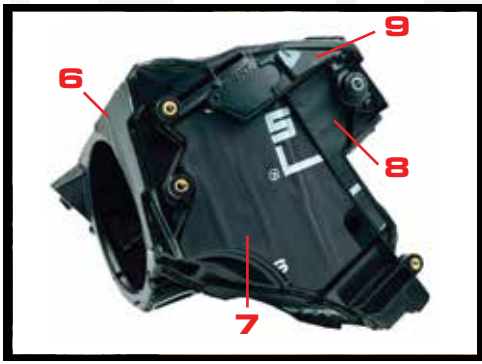

### 3. Inner Side Panel & Speaker Hole:

- Apply 6a and 6b around the speaker hole.
- Rotate the pod to see the inner side panel near the wire hole.
- Apply 7a and 7b in this area.
- place 8a and 8b above them.
- Apply 9a and 9b behind panel 7.



### 4. Bottom Side of Pod:

- Rotate the pod to make the bottom side visible.
- Apply 10a and 10b closest to the speaker hole.
- Place 11a and 11b adjacent to 10, then add 12a and 12b in between.



### 5. Final Panels:

- Apply pieces 13 and 14 toward the outside of the pod, next to the speaker hole.